


Welcome to Costock Village Hall Instructions for Heating and Hot Water

In the entrance lobby is the main on/off heating switch.

If the red light is on then the heating should also be on.
If the red light is off follow the instructions below.

If after a few minutes the heater has not started check that the wall thermostats are turned to 65° f.

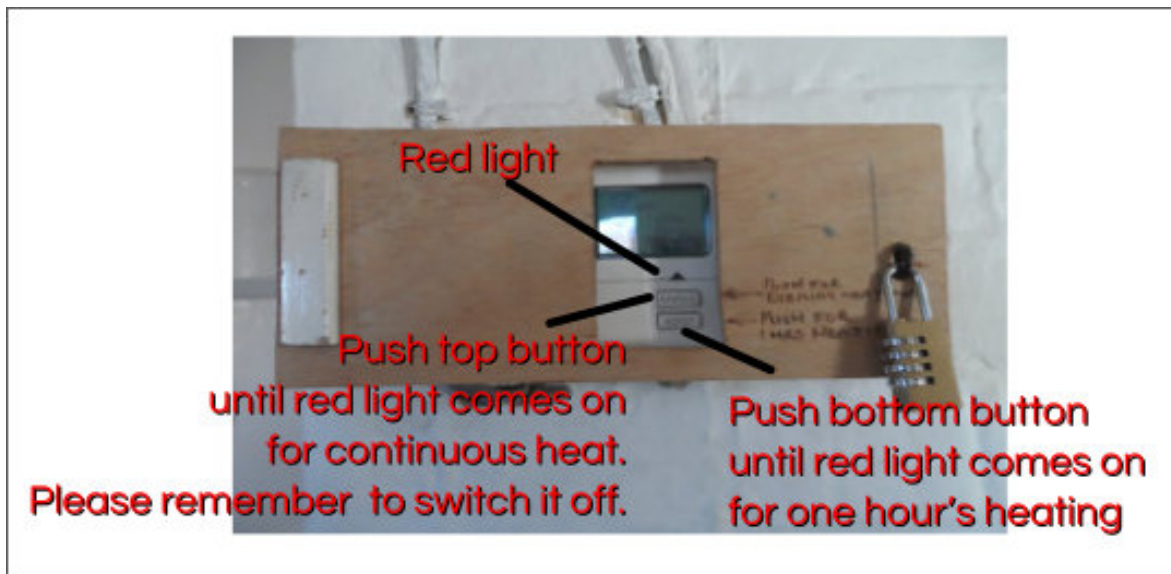

If after a further few minutes the heating has not started then check the heater pilot light.

To do this go to the lobby in the ladies toilet, open the door facing you to locate the heater for the warm air system. You will find instructions to light the **pilot light** and how to put on the **hot water** system to the toilets and the kitchen sink.

For hot water to the bar sink the switch is under the right hand base unit cupboard, please ensure this is switched off after use.

